




CK-019 Sepia



CK-017 Taupe

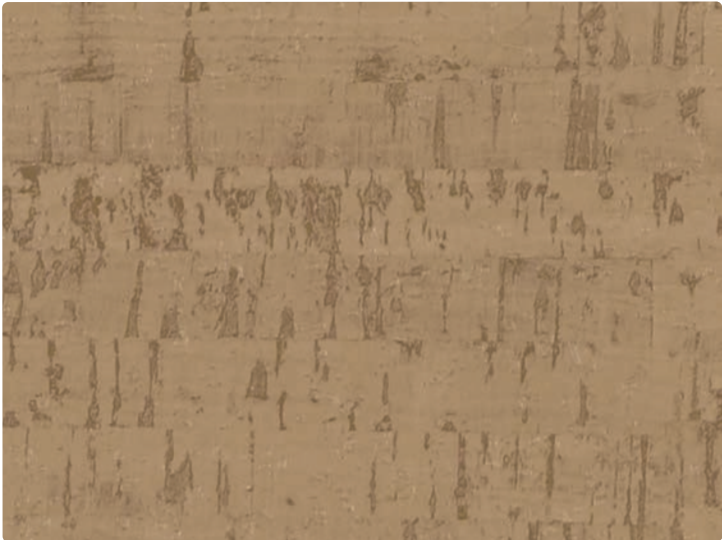

CK-027 Caramel



CK-007 Parchment



CK-010 Earth



Application
Suitable for Seating, Wall, Panel

Content
100% Polyurethane - **PVC FREE**

Width
54 inches

Abrasion
Exceeds 1,000,000 Double Rubs

Finish
Cleangene

Reduced Environmental Impact
GREENGUARD Certified
PVC FREE; Phthalate Free; Heavy
Metal Free; Formaldehyde Free;
Low VOC; BPA Free; Non-Toxic;
Energy and Water Efficient
Production; 99%+ of all Water
and Raw Materials used in
production are reclaimed and
recycled



CK-009 Tawny



CK-003 Oregano



CK-000 Espresso



TECHNICAL INFORMATION

Content: 100% Polyurethane - PVC FREE Width: 54" Weight: 18 oz./linear yard	Backing: 100% Polyester Finish: Cleangene Cleaning Code: WS, BC	Approx. Repeat: 14" H, 20" V Non-Matching Directional: Yes Railroaded: No
PERFORMANCE (*Certification Marks owned by ACT*)	Test Method	Results
Surface Abrasion: Heavy Duty A*	ASTM-D-4157	Exceeds 1,000,000 Double Rubs
Breaking Strength: ✂ *	CFFA-17 / ASTM-D-751	Warp 143 lbs / Fill 68 lbs
Seam Slippage: ✂ *	CFFA-14 / Method ASTM-D-751	Warp 56 lbs / Fill 38.2 lbs
Colorfastness to Crocking: ☉ *	AATCC-8	Dry: Class 4 min / Wet: Class 4 min
Colorfastness to Light: ☀ *	UV Resistance - CFFA-2 / ASTM-G26-96 Method C	200 Hours
Cold Crack:	CFFA-6 Fed. Stnd. No. 191A - Method 5874	-20° F

FLAMMABILITY **🔥 ***

California Technical Bulletin 117-2013	Passes
NFPA 260/UFAC Class 1	Passes
ASTM E84 Class 1 or A	Passes
BIFMA	Passes
IMO A.652 (16) 8.2	Passes
May comply with California Technical Bulletin 133 when combined with appropriate components.	

REDUCED ENVIRONMENTAL IMPACT

This product is **GREENGUARD** Certified for low chemical and particle emissions to UL standard UL 2818 and may contribute to LEED certification. For complete information visit mayerfabrics.com and UL.com/gg.

PVC FREE Phthalate Free Heavy Metal Free Formaldehyde Free Low VOC BPA Free Non-Toxic
99%+ of all Water and Raw Materials used in production are reclaimed and recycled Energy and Water Efficient Production

SUPERIOR PERFORMANCE

Engineered specifically for the demanding Healthcare, Hospitality and Contract markets:
Exceptional Abrasion Resistance Anti-Bacterial / Anti-Microbial Stain Resistant
Knit Backing for Ease of Upholstering Mildew Resistance Bleach Cleanable
7 year Hydrolysis (Jungle Test) rating - Test is performed by placing material in a sealed chamber at 90° C and 90% humidity.

CLEANING INFORMATION

WS: Water/Solvent Cleaner – Spot clean, with a mild solvent, an upholstery shampoo, or the foam from a mild detergent. When using a solvent or dry cleaning product, follow instructions carefully and clean only in a well-ventilated room. Avoid any product that contains carbon tetrachloride or other toxic materials. With either method, pretest a small area before proceeding. Always rinse promptly with clean water.

BC: Bleach Cleanable – 1 part bleach, 9 parts water = 10% bleach, 90% water solution. Do not clean/disinfect fabric for longer than 10 minutes using the 10% bleach solution. Always rinse promptly with clean water after applying the bleach solution. Failure to do so will void any and all warranties.

Prompt cleaning is always recommended. Recommended cleaning steps are listed by type of stain.
Regular Cleaning and Maintenance (Dirt, Dust, Grime): Clean the soiled area with mild soap and water, then rinse with fresh water and wipe dry with a clean cloth.
Food Stains/Oils (Ketchup, Chocolate, Coffee, Tea, Juice): Wipe affected area with a soft cloth or soft bristle brush using a non-abrasive cleaner, for example Formula 409® or Fantastik®. Rinse with fresh water and wipe dry.
Healthcare (Blood, Urine, Betadine, Disinfectant): Clean the soiled area with a 20% solution of household bleach and water. Rinse the cleaned area with fresh water after applying the bleach solution.
Difficult Stains (Eye Shadow, Mascara, Lipstick, Crayon, Grease, Mustard): Clean the soiled area with 50% solution of isopropyl (rubbing) alcohol and water. Alternately, use a 25% solution of bleach and water. Rinse the cleaned area with fresh water after applying the alcohol solution (bleach solution).
Ink Stains (Ballpoint Pen, Permanent Marker, Paint): Removal of these stains varies depending on type of ink, color and length of time before cleaning. Rub the marked area with undiluted isopropyl (rubbing) alcohol. Rinse the cleaned area with fresh water promptly after applying the alcohol. Note: To achieve the best results it is recommended to clean the stain immediately.

NOTE: This product may withstand the regular use of commercial cleaners and disinfectants not listed above. It is recommended to test the cleaners on a sample prior to use. Please refer to the Mayer Fabrics web site or contact customer service for approval of unlisted cleaning agents prior to use.

Results may vary under actual conditions.
This information is not a guarantee and does not relieve the user from the responsibility of the proper and safe use of the product and all cleaning agents. The use of certain agents can be harmful to the surface appearance and lifespan of vinyl.
Mayer Fabrics, its agents, and assigns assume no responsibility resulting from the use of such cleaning agents to the vinyl.
Please check compatibility when using this product in combination with painted or varnished surfaces.
Formula 409® is a registered trademark of the Clorox Company*. Fantastik® is a trademark of DowBrands, Inc.* registered trademark of the Dow Chemical Co.*
Mayer Fabrics is not sponsored by, affiliated with, or endorsed by such trademark owners. Additionally, any use by Mayer Fabrics of any third-party trademark does not constitute any endorsement by Mayer Fabrics of such third party.

ADDITIONAL INFORMATION

Custom Capabilities: All patterns can be custom colored. Minimum yardage applies.
Memo Samples: Please keep this card intact. Individual memo samples can be ordered on our website or by contacting customer service.
Fabric Color Matching: Mayer Fabrics always attempts to ship a satisfactory commercial match. Because of industry standard dye lot variation, colors may not match exactly.
Digital Swatch Card Color Matching: Due to color variations on different monitors and color printers, actual swatch colors may vary slightly. Please request a memo sample from Mayer Fabrics to ensure proper color representation.
Specifications: Specifications are correct at the time of printing. Current specifications are available on our website.
For information or assistance with products or services, call us at 800.428.4415 or refer to our website, www.mayerfabrics.com.





GSA Contract # **GS-28F-0022P**